ARAT Telephone mount

Type: Renault Kangoo
Model up to April 2003

Part No: 1279

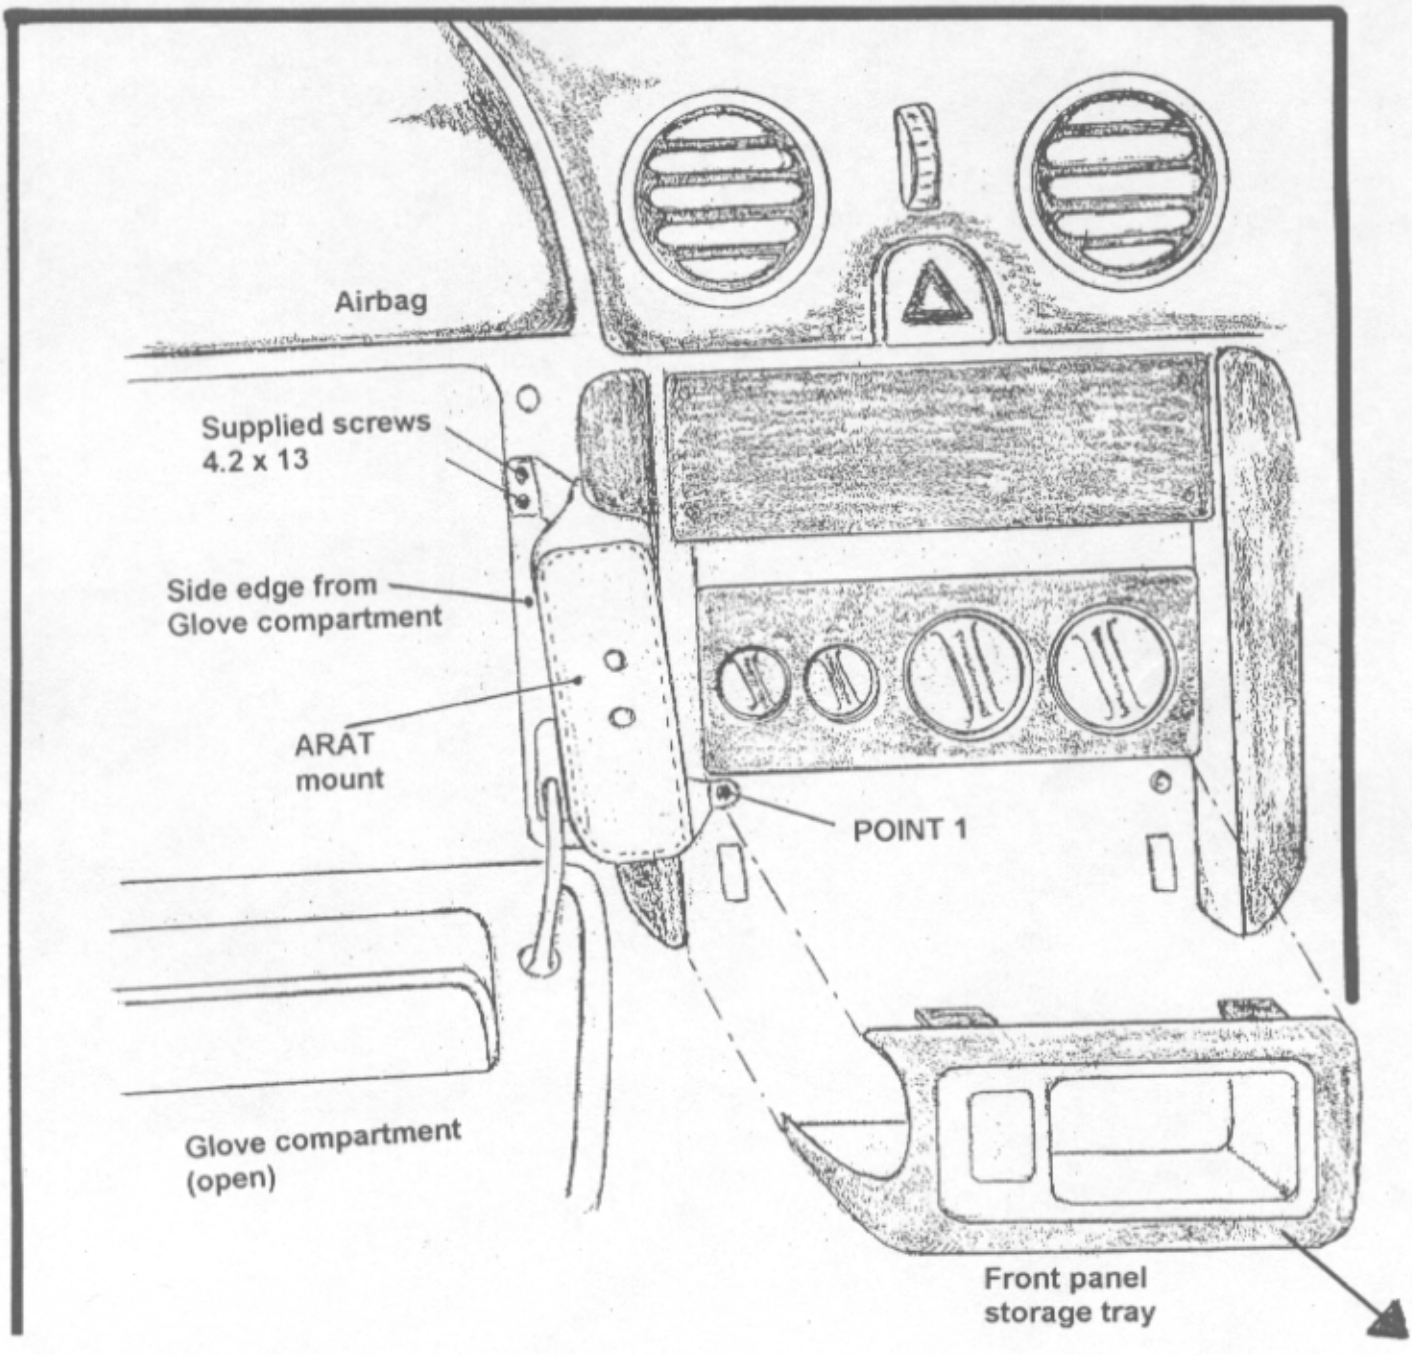

Installation instruction

1. Remove / prise off, the front panel / storage tray from its spring clips
2. Remove the screw at POINT 1, and open the glove compartment
3. Place the ARAT mount to the contours of the dashboard, and replace the screw at POINT 1 through the bottom metal bracket
3. Secure the ARAT mount with the supplied screws, 4.2 x 13, through the top metal bracket into the dashboard material (pre-drill Ø2mm) Replace the front panel